

Canon C200 MK I Settings Card

Last Modified on 07/29/2024 2:57 pm EDT

C200 Settings

Before every shoot, program the following primary settings on your camera.
When in doubt, seek assistance from Camera Faculty or Production Center Staff.

Camera Set Up:

Page 2

Shutter = Speed @ 1/48 (180°)

Base ISO = 800

Custom Picture/HDR

HDR/LUT= HDR:OFF

Preset = BT.709

Activate Other Settings = On

Other Settings:

Color Matrix Tuning:

Gain = -50 (For black and white)

Gain = 0 (For color)

leave all other menu settings at "0"

Recording/Media Setup

Page 1

Main Record Format: MP4 (SD Card)

System Frequency = 59.94

Record Mode = Normal

Page 2

Frame Rate = 23.98

Resolution/Color Sampling = 1920x1080 /
YCC 420 8 Bit

Audio Setup:

Select CH1/CH2 Input = INPUT Terminals

CH2 Input = INPUT 2

C200 SETTINGS

rev. 09/05/18

Before every shoot, program the following primary settings on your camera.
When in doubt, seek assistance from Camera Faculty or Production Center Staff.



Camera Set Up:

Page 2

Shutter = Speed @ 1/48 (180°)
Base ISO = 800



Custom Picture/HDR

HDR/LUT= HDR.OFF
Preset = BT.709
Activate Other Settings = On

Other Settings:

Color Matrix Tuning:
Gain = -50 (For black and white)
Gain = 0 (For color)
leave all other menu settings at "0"



Recording/Media Setup

Page 1

Main Record Format: MP4 (SD Card)
System Frequency = 59.94
Record Mode = Normal

Page 2

Frame Rate = 23.98
Resolution/Color Sampling = 1920x1080 /
YCC 420 8 Bit



Audio Setup:

Select CH1/CH2 Input = INPUT Terminals
CH2 Input = INPUT 2