


Sound Devices 633 - Overview and Initial Setup

Last Modified on 04/30/2025 5:23 pm EDT

Overview of Sound Devices 633


The Sound Devices 633 is a multitrack field recorder that can record sound from multiple sources.

- The **Front Panel** has the LCD screen, plus controls for:
 - Power
 - Menu access and settings
 - Recording and playback
 - Headphone volume levels
 - Channel trim, fader, pan, and pre-fade listen




The front panel of the Sound Devices 633.

- Left Side
 - XLR and TA3 inputs
 - X3/X4 aux output

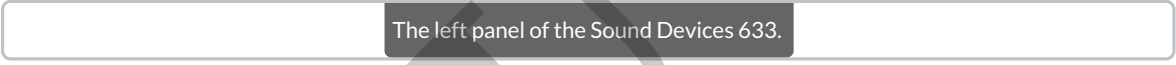

The left panel of the Sound Devices 633.

- Right Side
 - Memory card slots
 - Timecode in/out
 - Headphone output
 - Main outputs (left & right)



The right panel of the Sound Devices 633.

- Back
 - Battery mounts (Sony L-series batteries)



The back panel of the Sound Devices 633.

Batteries, Powering On and Off

The Sound Devices 633 is powered by two L-Series batteries. To attach them:

1. Place the 633 on a stable surface.

2. Position the battery so the two terminals on the battery line up with the tips of the two pins on the rear panel of the 633.
3. Press the battery against the unit and slide the battery onto the pins. The battery retainer clip will click to let you know the battery is secure.
4. Repeat for the second battery.

To power on the 633:

1. Locate the power switch on the front panel.
2. Switch it to the **On** position (to the right). Check to make sure the power LED has lit up.

To power off the unit:

1. Slide the power switch to the **Off** position (to the left).
2. Press and hold the **Menu** button until the screen flashes white.

Loading NYU Recommended Settings

NYU's recommended settings can be activated by:

1. Press the **Menu** button.
2. Use the **Select Encoder** to scroll down to **11. Quick Setup**. Press the Encoder to enter the Quick Setup menu.
3. In the **Quick Setup Menu**, use the Encoder to select **1. Load Settings**.
4. Select **INT 1** from the drop-down menu and press the Encoder to load the settings.

The recommended settings are:

- Inputs
 - **HPF:** 80 Hz
 - Source Settings
 - **Input 1 (boom):** MIC-PH
 - **Inputs 2-3 (lavs):** MIC
- Outputs
 - **X3, X4 Routing:** *Enable Input 1 (boom), post-fader*
- Limiters
 - **Limiter Enable:** Soft Knee
 - **Input 1-6 PostFade Threshold:** 16 dBu
- Recorder:
 - **Pre-Roll Time:** 6s
 - **Record to CF/SD:** WAV *poly*
- Timecode
 - **Mode:** Free Run
 - **Frame rate:** Match the camera frame rate
- File Storage
 - Folder Options
 - **Top Level:** Project Title
 - **Mid-Level:** <Daily>
 - **Bottom-Level:** <Scene>

- System
 - **Meter Peak Hold Time:** 2 sec

Inserting and Formatting the Memory Card

To insert a memory card:

1. Open the **Media Door** on the right side of the 633.
2. Insert the memory card into the appropriate slot.
 - a. When inserting the **SD card**, ensure that the bottom of the card (the side with metal contacts visible) is facing the rear of the unit.
 - b. When inserting a **CF card**, ensure the top of the card (the side with the branding label) is facing the rear of the unit.

To format the memory card:

1. Press the **Menu** button.
2. Turn and press the **Headphone encoder** to select *File Storage*.
3. Select either **Erase/Format CF** or **Erase/Format SD** based on the type of card you're using.
4. Press the **Headphone encoder** to begin the formatting process.
5. Read any warning message(s), select **OK**, and press the **Headphone encoder** to continue.
6. When the **Format success** message appears, select **OK**, and press the **Headphone encoder** to finish the formatting process.